

LOFT WALL

COUNTER SHIELD - WRAP ASSEMBLY INSTRUCTIONS

Tools



Posts



Horizontal Bars



OR




Large

Panels




OR




Large

1


Leaving a 4" gap above the bases, attach the horizontal bar by locking it into the post channel.

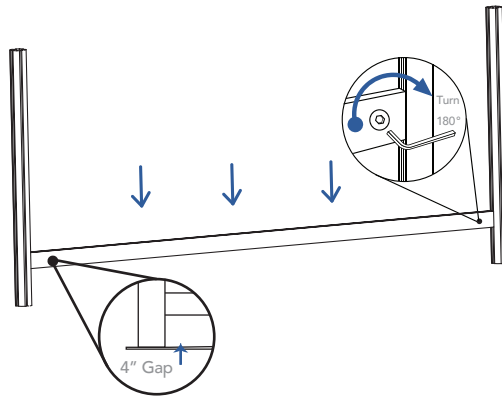

2

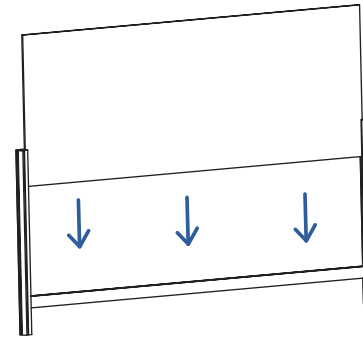


3

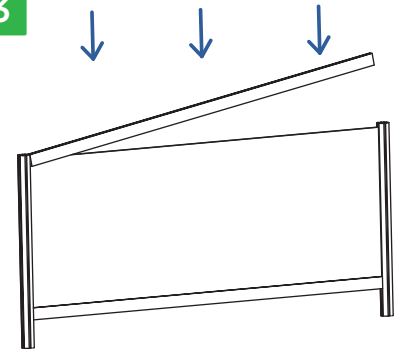


4


Lock the 12" return bar on the back side of the vertical post.

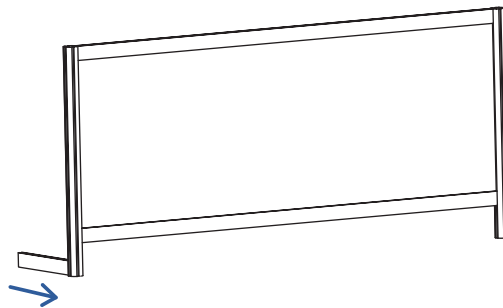


5

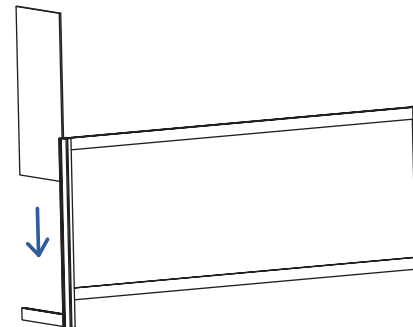

6

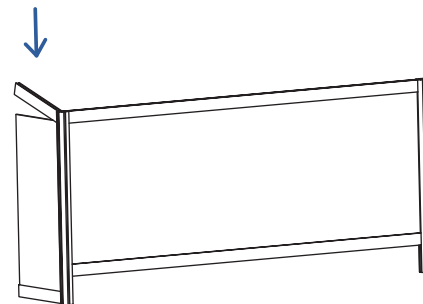

7

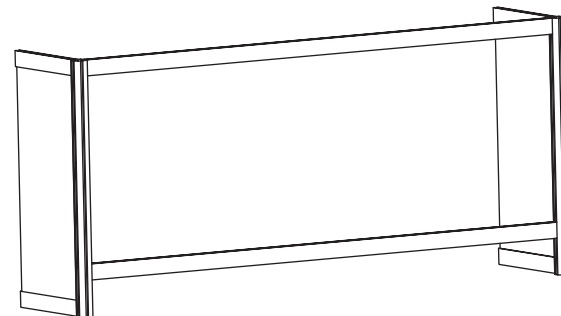

Repeat steps 4, 5, and 6 on the other vertical post.