


GENERAL ASSEMBLY INSTRUCTIONS : DESIGN VARIES PLEASE CONSULT WITH DESIGNER OR ARCH. FOR PANEL ORIENTATION AND DESIGN


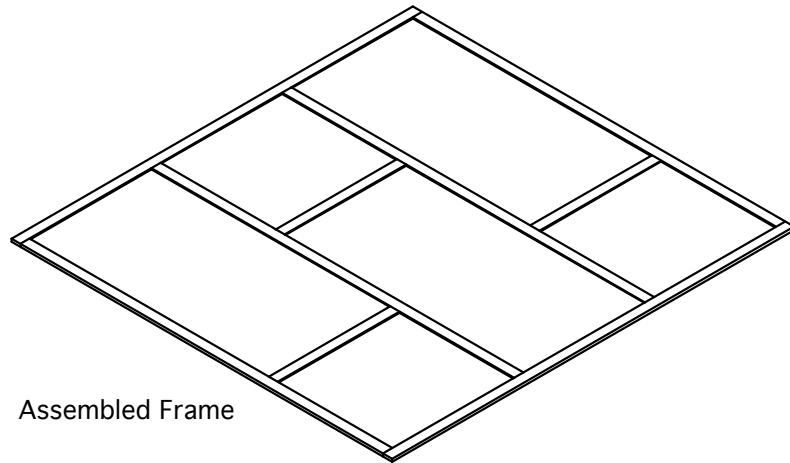


Assembled Frame

1. Lay frame components on floor with hex(round locks) facing up

2. Arrange panels in proper location and begin to lock frame components together with allen key and insert panels from one side into frame

3. Once panel assembled, insert eye bolts into holes on frame.

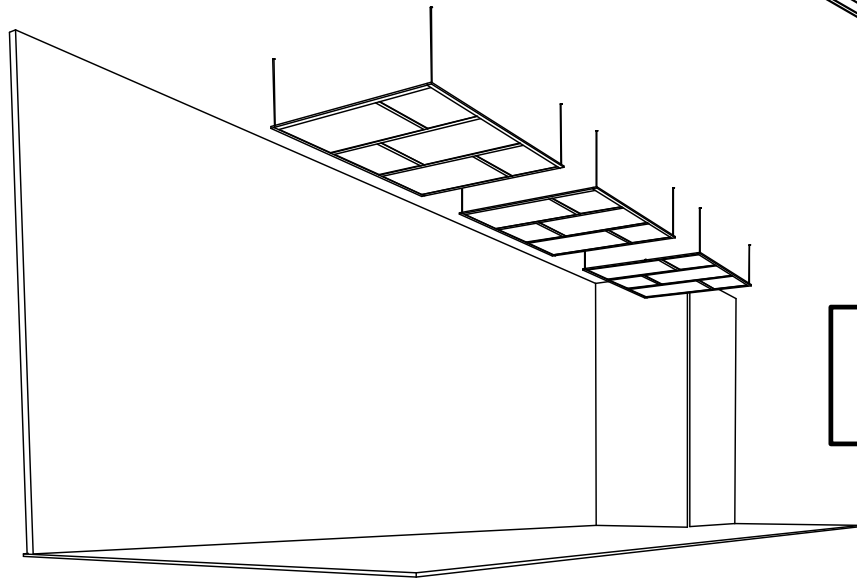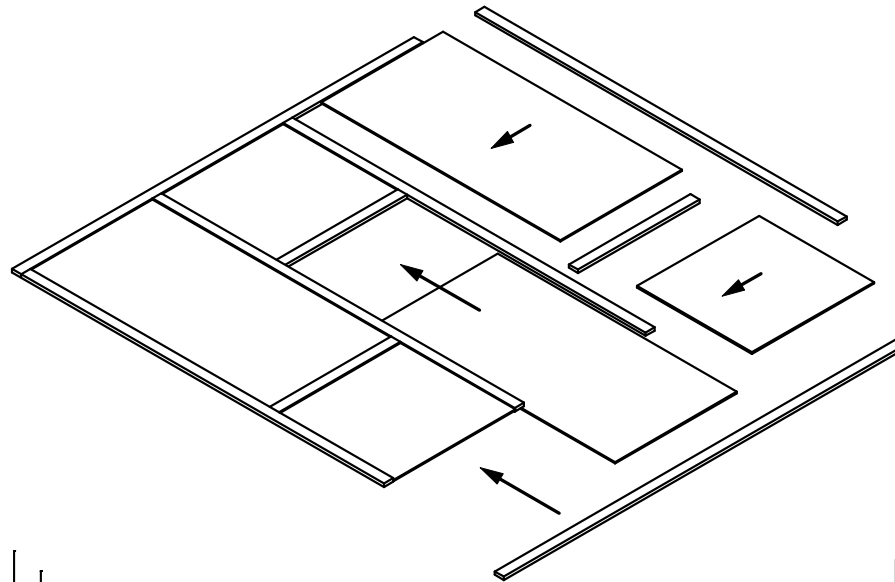

**NOTE: Cable and Harnesses are not included
please consult your contractor for proper mounting
hardware required for your installation**

**LOFTWALL
SKY**

LOFTwall™
dividers for living and working

Loftwall
4705 Vicksburg St.
Dallas, Texas 75207

Phone: 214-659-9944
www.loftwall.com