
## LOFTWALL

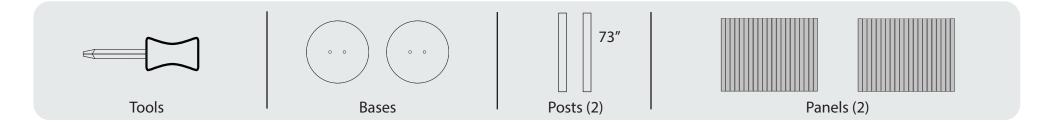

- Screw on bases to posts One end of posts is pre-tapped
- Slide channel groove into post channels ! Insert panel with lip facing upwards first!
- Slide second panel into post channels ! Ensure panels are aligned correctly!

