


### 1 ASSEMBLE BASES

Attach bases to base plate end of posts

See Drawing 1.

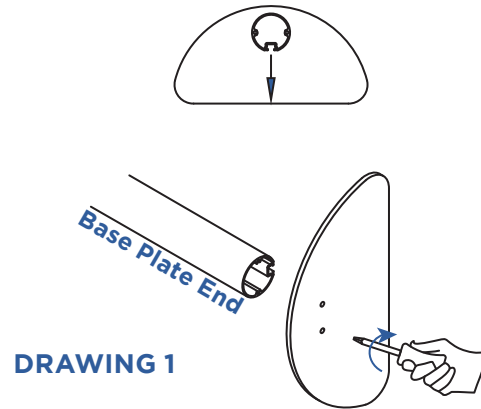


DRAWING 1

### 3 INSERT SLATS

Place slat within the post channel so that it rests upon the small spacer.

See Drawing 3.

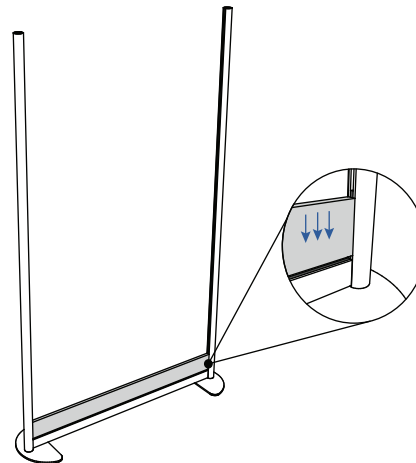

DRAWING 3


### 2 PREPARE FRAME

a) Insert long spacer along the top channel of one of the horizontal bars.

b) Place horizontal bar in between the two posts, spacer facing up. Attach horizontal bar & lock into post channel.

c) Insert small spacer within the post channels, do this for both posts.

See Drawing 2.

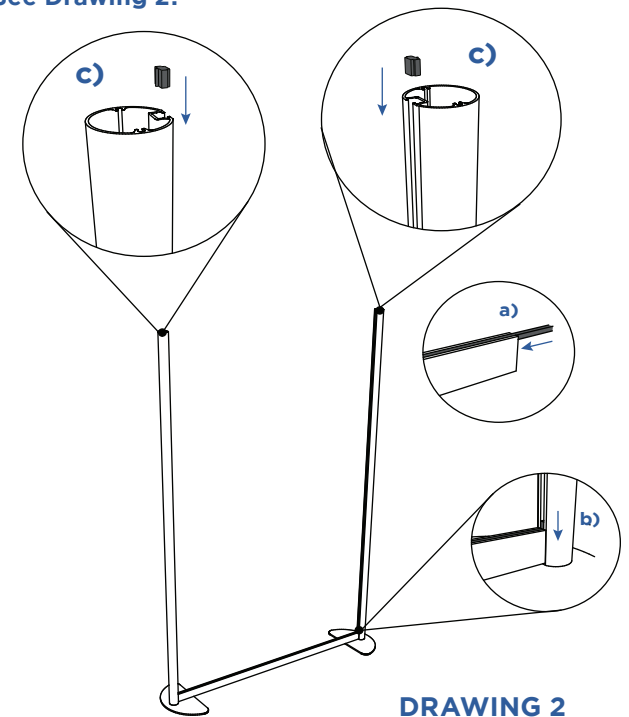

DRAWING 2


### 4 INSERT SLATS (cont.)

There should be 5 slats per section, once in place add final spacers. Insert long spacer in the bottom channel of the top horizontal bar. Place horizontal bar on top and lock into post channel.

\*Repeat steps 2 & 3 for each remaining slat section.

\*\*If you are building multiple slat sections make sure long spacer is in both channels of horizontal bars for the middle section. See Drawing 4B.

See Drawings 4 & 5.

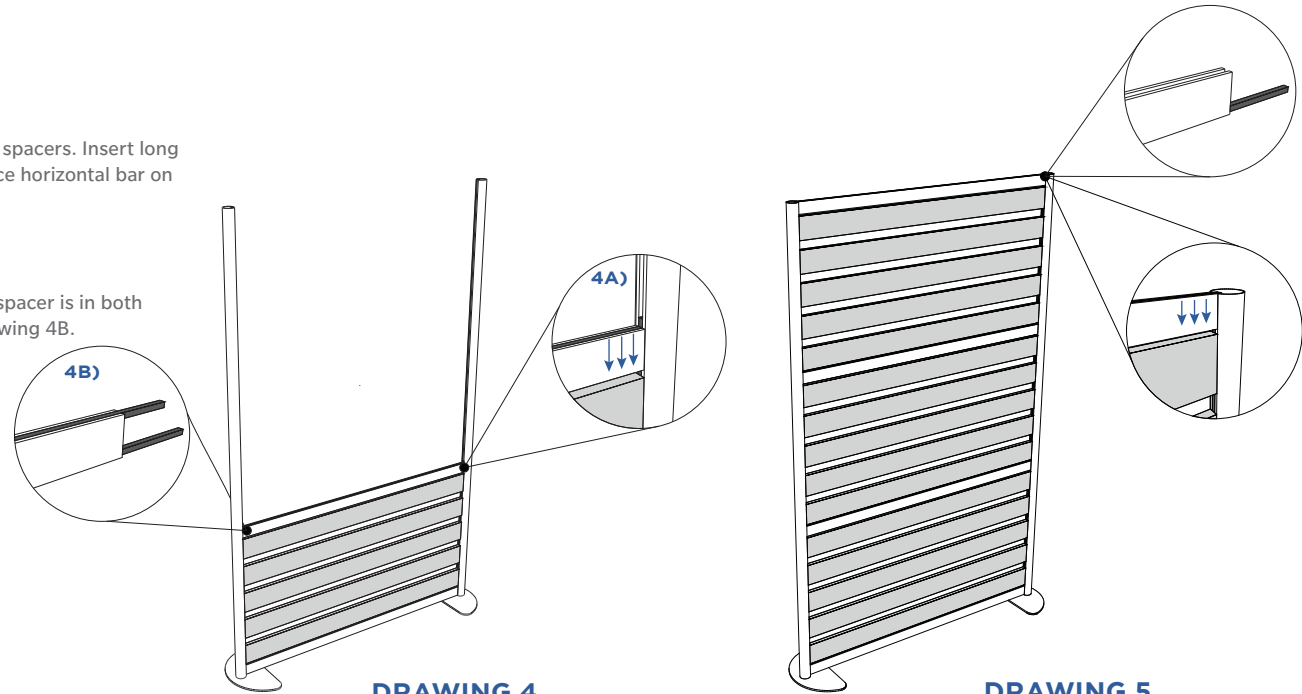


DRAWING 4

DRAWING 5

### 5 FINISHING TOUCHES

Add post caps on top of posts and cover locks with cap covers

See Drawing 6.

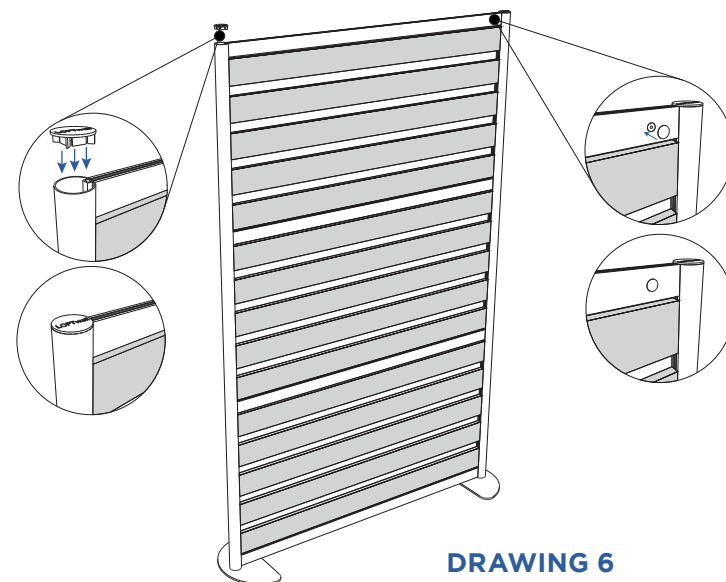

DRAWING 6