

BUFFER

LOFTWALL

BUILD GUIDE

PREREQUISITES

 **ONE PERSON**
REQUIRED - NOT PROVIDED


 **POWER DRILL**
REQUIRED - NOT PROVIDED

MATERIALS

a. Panel




b. Base Plate



c. Post




d. Screws

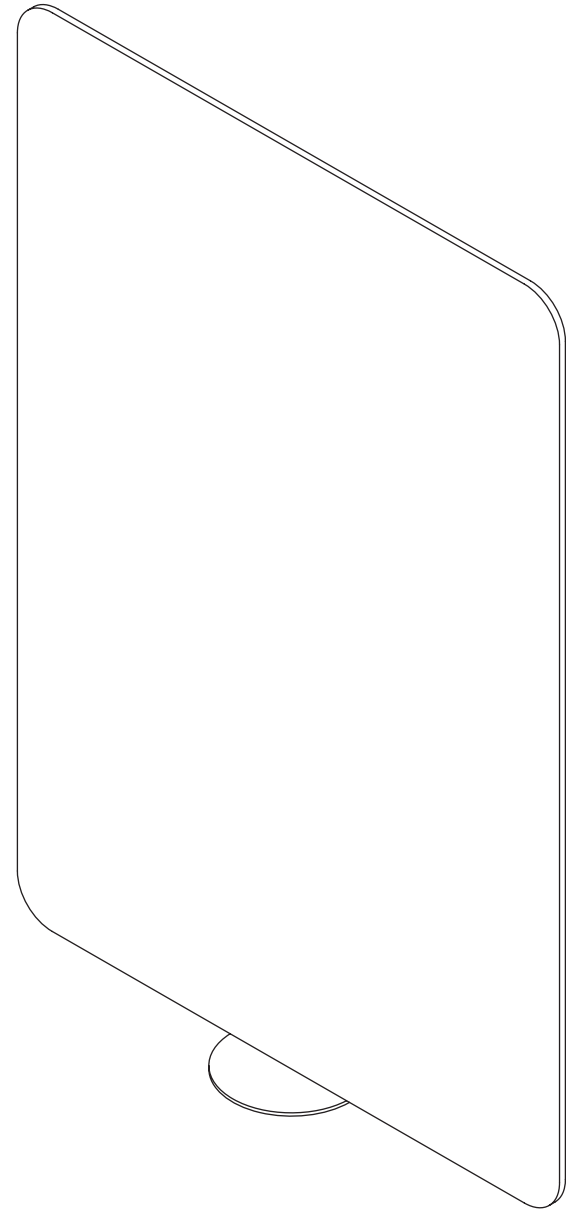


ASSEMBLING BUFFER

1. Using the provided screws, attach the base to the post. Be sure the side of the post with the pre-applied tape is facing down towards the base. Once the post is attached to the base, stand them up vertically.
2. Before placing the panel on the post, remove the liner of the pre-installed tape.
3. Find the slit on the bottom of the panel and slide the panel onto the post, pushing it down till it reaches the base.
4. Once the panel is installed onto the post, press the PET along the bottom 2' of the post to ensure a sufficient bond between the tape and the PET has occurred.


1

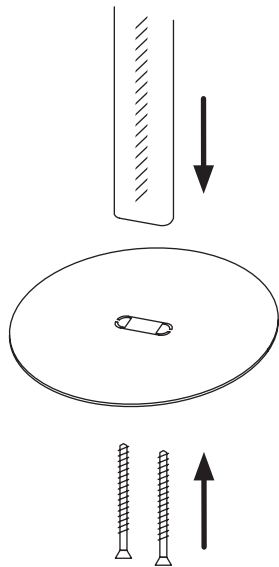

2

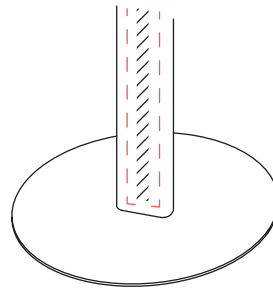

3

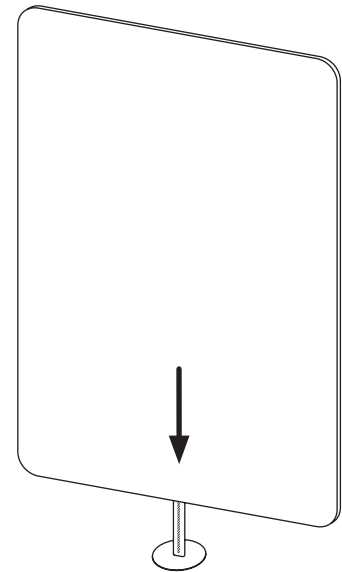

FOR MORE INFORMATION

Scan the QR Code

- To see all product details
- For details on how to contact us.

